


# BackSaver Garment Lift™

Fits Maxi Laundry Lockups

**Reduce  
Injuries and  
Increase  
Your Route  
Service  
Productivity  
With Penco's**

**BackSaver  
Garment Lift™**

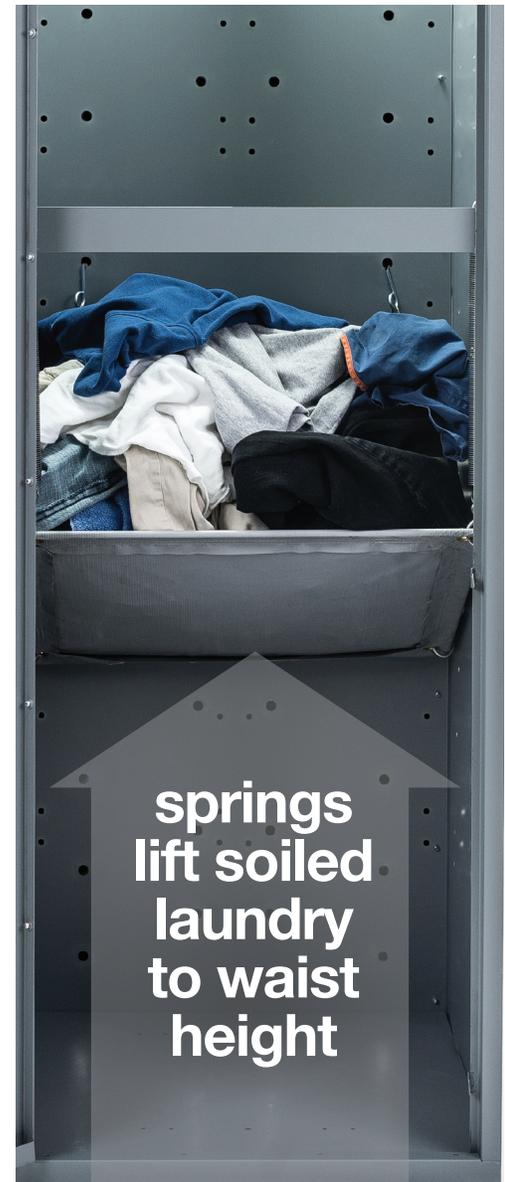

- Lifts soiled garments to waist height, eliminating repetitive bending motion during collection
- Platform retracts upward as the soiled garments are removed
- Fits all existing Penco Maxi Laundry Lockups, including older Steiner Change-O-Matic models
- Quality components, built to last:  
washable PVC tarp platform, zinc-plated,  
steel frame and expandable steel springs
- Packaged 5 per case

BackSaver Garment Lift			
Description	Part. No.	Size	Quantity
Garment Lift	SC-GL1000	23"W x 19"D	5 per case

Penco Products, Inc. | 1820 Stonehenge Drive, Greenville, NC 27858 | Phone 800.562.1000


# BackSaver Garment Lift™

## Installation Instructions

The Back Saver Garment Lift™ is simple to install and will fit in any Penco or Steiner System Maxi Laundry Lock Up:

- Open the master door of the Maxi Laundry Lock Up, and insert the BackSaver Garment Lift with the springs laying on top of the lift, see Figure A. The spring/hooks should be facing the back and front of the Maxi Laundry Lock Up.
- The back hooks must be inserted in the holes on the back panel that are closest to the side panels and 43" from the base of the Maxi Laundry Lock Up, see figure B.
- The front hooks must be inserted in the holes on the side panel that are closest to the door frame, 49" from the base of the Maxi Laundry Lock Up.
- When positioned correctly, the platform of the BackSaver Garment Lift will be tilted toward the back of the Maxi Laundry Lock Up.

**BackSaver**  
**Garment Lift™**

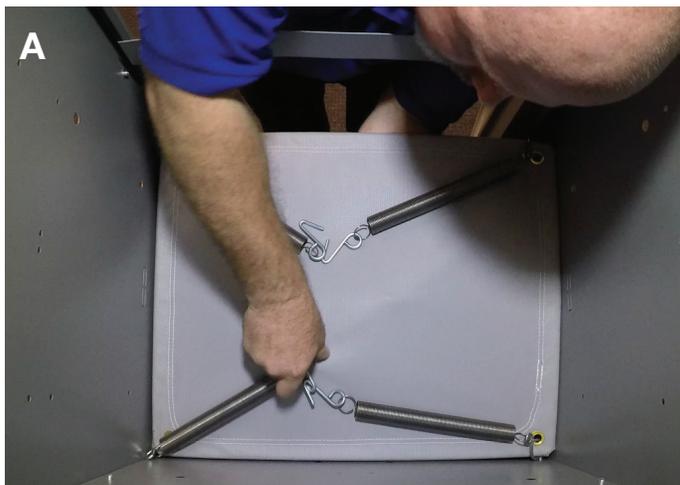

GarmentLift2015.indd/pdf

Penco Products, Inc. | 1820 Stonehenge Drive, Greenville, NC 27858 | Phone 800.562.1000